

## • STEP 6 •


### DOME FRAME INSTALLATION

Requires 2-3 people.

**Tools Required:**

Cordless Drill, 5/16 Hex Driver, (2) Step Ladders,  
(2) Clamps

The dome frame is a one-piece metal frame for all sizes except the 10 x 12 pavilion. The 10X12 is a two-piece and will require assembly. See supplemental instructions (Supp 1 - Last Page).

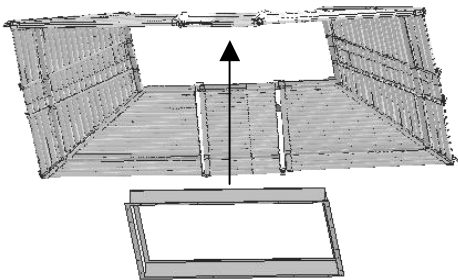

**STEP 6a** • (Single Piece Domes) Place one-inch wide double-sided weather strip tape on the top surface of the frame where the dome attaches and on the lip of the frame where the roof panels attach.

**STEP 6b** • With the dome frame inside the Pavilion lift up and push through the opening.

This will require two or three people. NOTE: Roof panels will rise slightly before frame goes through opening. While holding up into opening secure using #10 x 1 5/8" wood screws through the pre-drilled holes of the frame into roof panels.

**STEP 6c** • Before installing dome using clear outdoor caulk fill in groove between roof panels and skylight frame. ***This step must be done carefully to avoid leaks.***