

• **STEP 9** •


## DECK MOUNTING BRACKET

1 Person Required.


**Tools Required:**

Cordless Drill, 5/16 Hex Driver,  
Deck Anchors (*Not Supplied*)

**STEP 9a** • Measure over from corner 14 inches and make a mark on bottom of panel. With bracket flat on deck (or concrete) align center of slot with mark and secure with #10 X 1 ½ “ TEK screw and 1” washer. Install two deck brackets on each wall as shown in diagram.

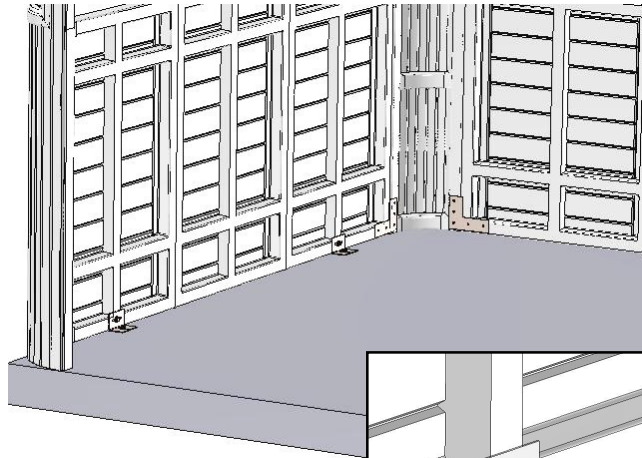

**STEP 9b** • Permanently secure deck brackets to concrete slab or wood deck. Consult your hardware supplier for proper fasteners.

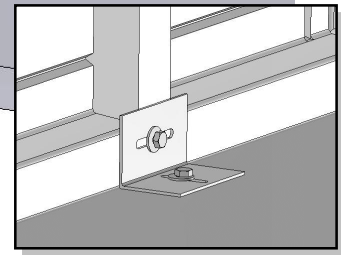

**WARNING:** Pavilions **must** be anchored to permanent surface. Failure to do so may cause property damage or personal injury.